


Salt & Pepper Mills Care & Use Instructions

Cleaning: Wipe off the exterior of the salt or pepper mills with a mild soap to clean. Never soak the salt or pepper mills in any liquid including plain or soapy water.

See picture below for location of Grind Adjustment Screw & location for adding your pepper corns.

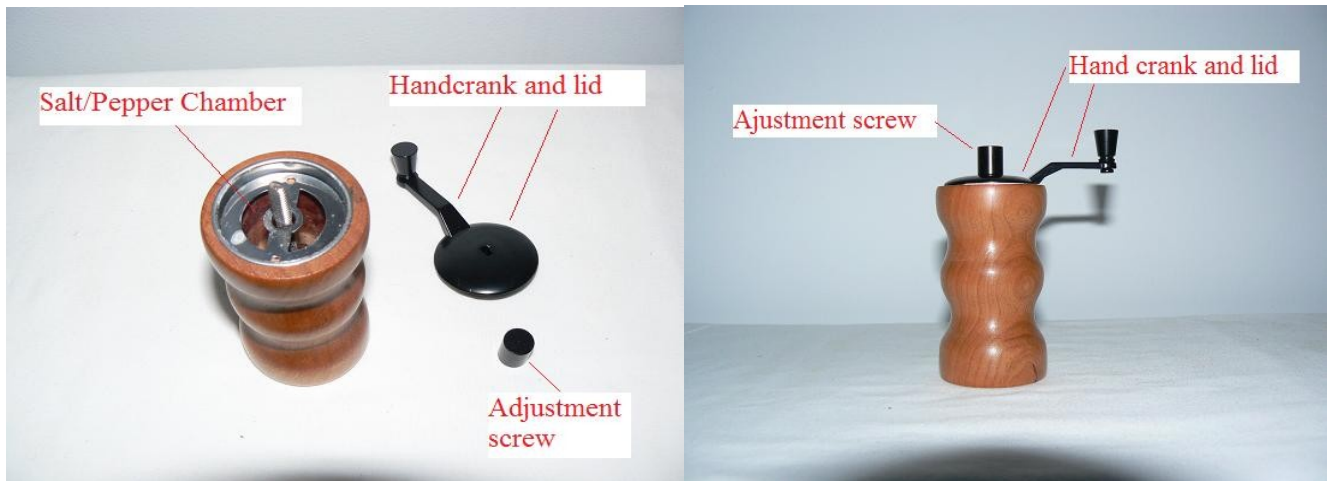

NOTE: These mills use ceramic to crush your salt and pepper corns. Care must be taken not to over tighten the adjustment screw. If it is, loosen by turning counter clockwise. The hand crank will turn easily. If the hand crank/lid is too tight and the ceramic parts are in contact, damage to the ceramic mill may occur.

Filling your Salt and Pepper Mills:

- #1, Turning the adjustment screw counter clockwise, remove the adjustment screw.
- #2, Lift off the hand crank lid and fill with your favorite salt or pepper corns.

Adjusting the mills for your grind:

Please see the above note:

- #1, With the adjustment screw loose, turn the hand crank until you are producing a grind.
- #2, Turn the adjustment screw clockwise no more than 1/4 turn.
- #3, Turn the hand crank a few times, till you are producing ground pepper.
- #4, Repeat #2 & #3 until the desired grind is achieved.

Thank you,

Peter Kaj

PKBrown Woodworking

Web Site: www.pkbrownwoodworking.com

Online Shop: <http://www.etsy.com/shop/pkbrownwoodworking>

Fan on Facebook - <http://www.facebook.com/pages/PKBrown-Woodworking/176866972333115>

08/18/2012